




E-mail:buyobd@gmail.com
Skype:Marshall.obd2
Whatsapp:86-13476108995
www.buyobdii.com

Instruction of 46 Chip Copy

www.buyobdii.com



- 1st step: Turn on the machine and go to main menu , use “up” and “down” button to select language of English.

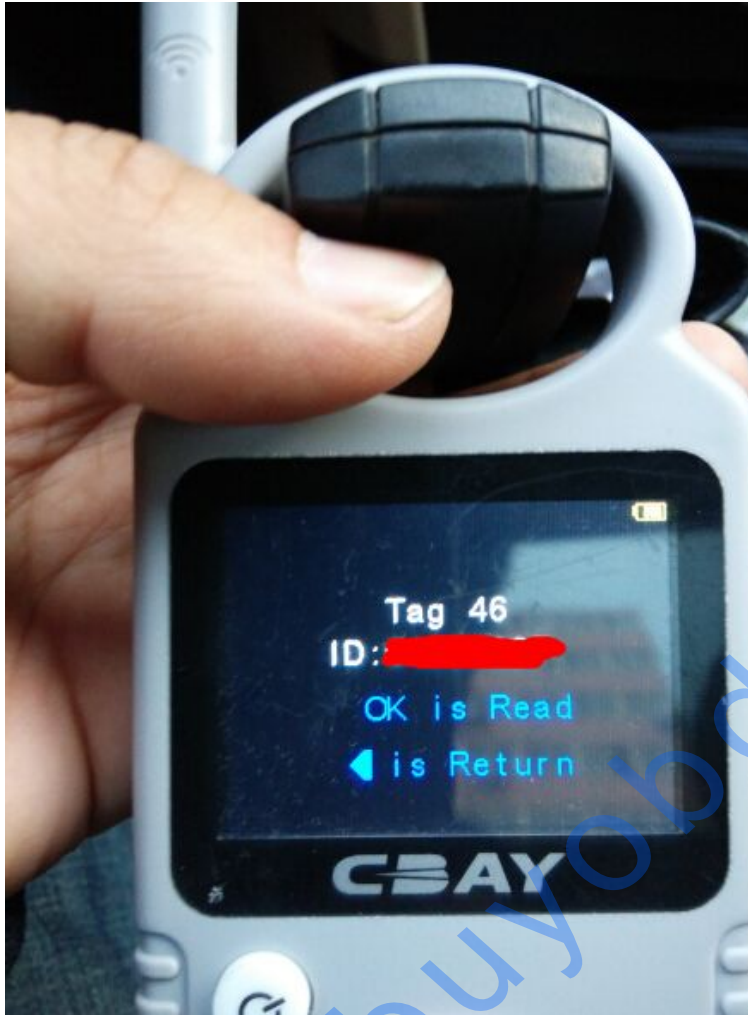


- 2nd Step: Read chip data of Original key as above picture shows.
- 3rd Step: Press “OK” button to enter into Crack procedure



- **4th step: Insert the Original key into ignition, meanwhile keep the signal coil of the clone machine near to the ignition coil, turn on the ignition lock to collect the data(If you use the smart card, put the signal coil of the clone machine near the ignition before insert the key)**



- 5th step: If it shown “Collect ok, crack now?” on screen, you have successfully got the data from the car, just press “OK”
- 6th step: Put the OEM key into signal coil to decode.

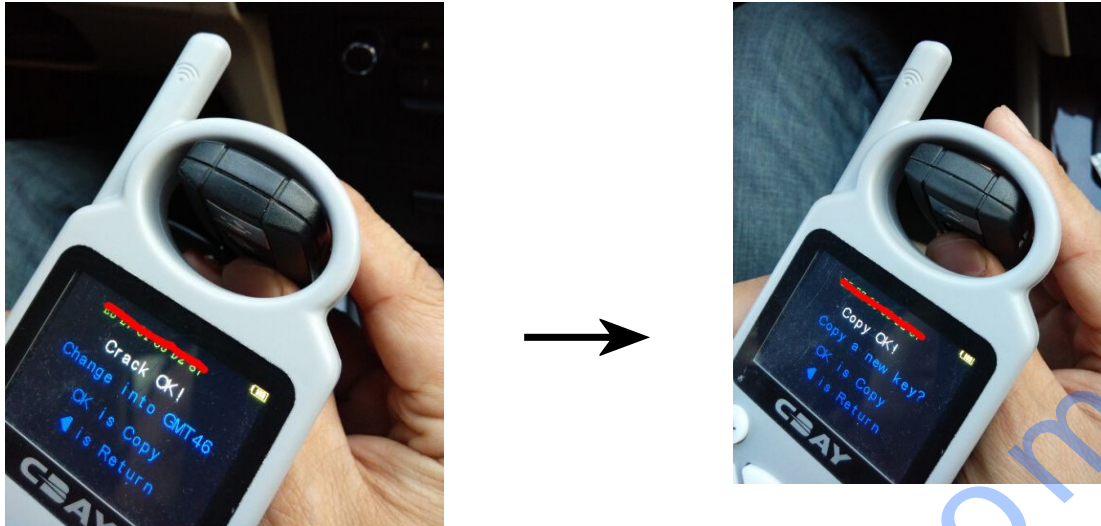

- 7th step: If it shows “Crack ok” as above picture shows, then decoding OK, the key security code have been calculated.
- 8th step: Put clone chip into signal coil area, press “OK” to copy.
- 9th step: It shows “Copy OK” as above picture shows. If you want to copy more keys, just replace new chip and press ok as step 8. If finished copy, press left button to quit.